# Dimming Touch Wheel RF Remote Controller

# Model No.: RT1/RT6/RT8

1, 4, 8 zone dimming/Touch color wheel/Wireless remote 30m distance/AAAx2 battery

### **Features**

- Apply to single color LED controller.
- Ultra sensitive color adjustment touch wheel.
- Each remote can match one or more receiver.
- AAAx2 battery powered.
- Operate with LED indicator light.







RT6 4 Zone Dimming



RT8 8 Zone Dimming

### C€ RoHS emc LVD RED


## Technical Parameters

Input and Output		
Output signal	RF(2.4GHz)	
Working voltage	3VDC(AAA×2)	
Working current	<5mA	
Standby current	<10µA	
Standby time	l year	
Remote distance	30m(Barrier-free space)	


Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

Environment		
Operation temperature	Ta: -30 °C ~ +55 °C	
Package		
Size	L140 x W60 x H26mm	
Gross weight	0.088kg	
Warranty		
Warranty	5 years	

## Mechanical Structures and Installations

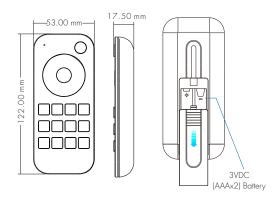


# with two screws, or adhere the back holder to the wall with paster.

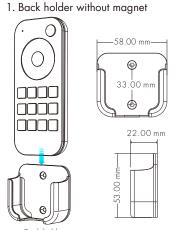

# 2. Back holder with magnet

Back holder Two options are offered for selection, please fix the back holder on the wall

(The remote with built-in magnet)

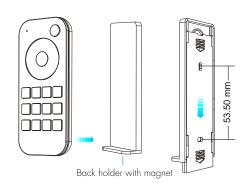

# Operation

- When turn on light, the indicator display blue. when turn off light, the indicator display red.
- When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

# Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

### Use the controller's Match key

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote.

The LED indicator fast flash a few times means match is successful.

Press and hold match key for 5s to delete all match,

The LED indicator fast flash a few times means all matched remotes were deleted.

### Use Power Restart

Switch off the power, then switch on power, repeat again.

Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote.

The light blinks 3 times means match is successful.

Switch off the power, then switch on power, repeat again.

Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote.

The light blinks 5 times means all matched remotes were deleted.

User Manual Ver 1.2.1 —

### Key function

### • RT1 1 zone dimming remote



- : Turn on/off light.
- : Touch to change brightness.
- 🗱 🚼 : Adjust brightness, short press 10 levels, long press 1-6s for continuous 256 levels adjustment.
  - : Small night brightness (10%).
  - : Turn off light after 30s, long press 2s will turn off light after 60s.
- 25%, 50%, 75%, 100% brightness.
- S<sub>1</sub> S<sub>2</sub> S<sub>3</sub> S<sub>4</sub> : Short press recall the scene, long press 2s save current brightness into S1/2/3/4. the LED indicator display green when save OK.

### • RT6 4 zone dimming remote



- : Short press turn on/off all zone light.
- : Touch to change current zone brightness.
- 1 2 3 4 : Short press select and turn on zone light, long press 2s turn off zone light.

  Short press multiple zone key fastly, will select multiple zone synchronously.
- 25%, 50%, 75%, 100% brightness for current selected zone.
- S<sub>1</sub> S<sub>2</sub> S<sub>3</sub> S<sub>4</sub> : Short press recall the scene, long press 2s save current state into S1/2/3/4. the LED indicator display green when save OK.

  4 zone recall or save synchronously.

### The remote can be used as 4 zone dimming remote or single zone 4 channel dimming remote.

On/Off + 4: Long press 2s set as 4 channel dimming remote, only match with one or multiple receiver of 4 channel, such as V4 or C4 controller.

On/Off + 1: Long press 2s set as 4 zone dimming remote, each zone match with one or multiple receivers.

When set ok, the red indicator will light on longer.

### • RT8 8 zone dimming remote



- : Short press turn on/off all zone light.
- : Touch to change current zone brightness.
- 1 2 3 4 : Short press select and turn on zone light, long press 2s turn off zone light.

  5 6 7 8 Short press multiple zone key fastly, will select multiple zone synchronously.
- S<sub>1</sub> S<sub>2</sub> S<sub>3</sub> S<sub>4</sub> : Short press recall the scene, long press 2s save current state into S1/2/3/4. the LED indicator display green when save OK. 8 zone recall or save synchronously.

# Safety information

- 1. Read all instructions carefully before you begin this installation.
- 2. When installing battery, pay attention to the battery positive and negative polarity.
  - A long time without the remote control, remove the battery.
  - When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

User Manual Ver 1.2.1 — 2