4 Channel Constant Voltage Power Repeater

- 12-24V constant voltage power repeater.
- 4 channel, 8A per channel.
- To receive PWM signal control.
- Power repeater in series or in parallel to expand output unlimitedly.
- Apply to single color, dual color,
 RGB or RGBW constant voltage LED strip or module.








Technical Parameters


| Input and Output | | Warranty and Protection | | Safety and EMC | |
|------------------|------------------|-------------------------|---------------------|--------------------------------------|--------------------------|
| Input voltage | 12-24VDC | Warranty | 5 years | EMC standard (EMC) | ETSI EN 301 489-1 V2.2.3 |
| Input current | 32.5A | Protection | Reverse polarity | ETSI EN 301 489-17 V3.2.4 | |
| Input signal | PWM | | | Safety standard(LVD) | EN 62368-1:2020+A11:2020 |
| Output voltage | 4 x (12-24)VDC | Environment | | Certification | CE,EMC,LVD |
| Output current | 4CH,8A/CH | Operation temperature | Ta: -30 °C ~ +55 °C | Package | |
| Output power | 4 x (96-192)W | Case temperature (Max.) | Tc: +85°C | Size | L120 x W90 x H30mm |
| Output type | Constant voltage | IP rating | IP20 | Gross weight | 0.287kg |

Mechanical Structures and Installations

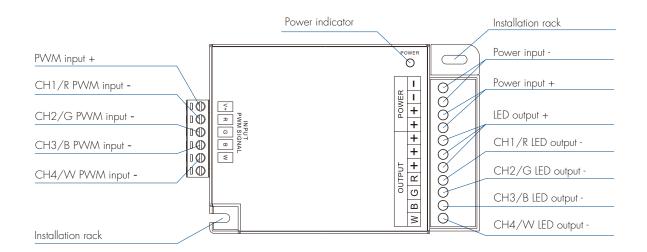

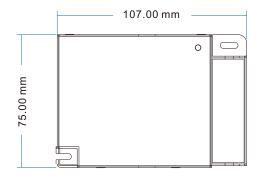

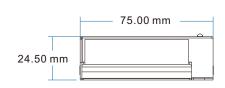

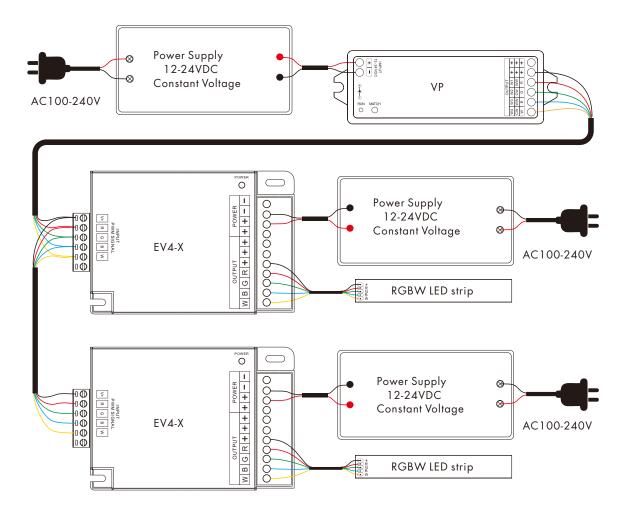

Malfunctions analysis & troubleshooting

| Malfunctions | Causes | Troubleshooting | |
|--|--|---|--|
| No light | No power. Wrong connection or insecure. | Check the power. Check the connection. | |
| Wrong color | 1. Wrong connection of R/G/B/W wires. | 1. Reconnect R/G/B/W wires. | |
| Uneven intensity between front and rear, with voltage drop | Output cable is too long. Wire diameter is too small. Overload beyond power supply capability. Overload beyond controller capability. | Reduce cable or loop supply. Change wider wire. Replace higher power supply. Add power repeater. | |

Safety & Warnings

- $\ensuremath{\mathsf{1}}$. The product shall be installed and serviced by a qualified person.
- 2. This product is non-waterproof. Please avoid the sun and rain.
- 3. Good heat dissipation will prolong the working life of the controller, Please ensure good ventilation.
- 4. Please check if the output voltage of any power supplies used comply with the working voltage of the product.
- 5. Ensure all wire connections and polarities are correct and secure before applying power to avoid any damages to the LED lights.
- 6. If a fault occurs please return the product to your supplier. Do not attempt to fix this product by yourself.